



File Name: Canon clc 3220 manual.pdf

Size: 4740 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 5 May 2019, 13:58 PM

Rating: 4.6/5 from 755 votes.

Download Now!

Please check the box below to proceed.



I'm not a robot



reCAPTCHA
Privacy - Terms

Book Descriptions:

Canon clc 3220 manual



Please read this guide before operating this equipment. ENGLISH After you finish reading this guide, store it in a safe place for future reference. Please refer to them for detailed information. The manuals supplied with optional equipment are included in the list below. Depending on the system configuration and product purchased, some manuals may not be needed. Guides with this symbol are printed manuals. Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, as we are constantly improving our products, if you need an exact specification, please contact Canon. Please read this manual thoroughly before operating the machine in order to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference. Also, accessories such as watches and rings should be removed before working on the product. The reflected beam, even though visible or invisible, can permanently damage your eyes. Adobe, Acrobat, PostScript and PostScript3 are trademarks of Adobe Systems Incorporated. Macintosh and Mac OS are trademarks of Apple Computer, Inc. Then, contact your local authorized Canon dealer. Necklaces and other metal objects Cups, vases, flowerpots, and other containers filled with water or liquids. Then, contact your local authorized Canon dealer. Continued use of the machine in this condition may result in a fire or electrical shock. Since radiation emitted inside the product is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation. Failure to observe these steps may result in a fire or electrical shock. Disconnect the power cord from the power outlet regularly, and clean the area around the base of the power plugs metal pins and the power outlet with a dry cloth to ensure that all dust and grime is removed. <http://www.sa-grapsas.ibisologismos.gr/admin/uploads/dodge-ram-factory-service-manual-download.xml>

- **canon clc 3220 manual, canon clc 3220 manual pdf, canon clc 3220 manual download, canon clc 3220 manual software, canon clc 3220 manual instructions.**



Do not store toner cartridges or copy paper in places exposed to open flames, as this may cause the toner or paper to ignite, resulting in burns or a fire. Reference Guide Contains the basic operation instructions, daily maintenance, and troubleshooting instructions. Copying and Mail Box Guide Contains the Copying and Mail Box function instructions. Follow the instructions below to use the User Manual CDROM Menu. System Requirements The User Manual CDROM Menu can be used in the following system environments. When you insert the User Manual CDROM provided into the CDROM drive, the Language Selection screen is displayed. If a malfunction occurs after an inspection, contact your local authorized Canon dealer. Checking the Breaker Push the test button with the tip of a ballpoint pen, or similar object. Fill in the check sheet, located on p. 46, to document your periodic inspections of the breaker. xxiii. Installation Location and Handling. 12 Installation Precautions. We recommend that you read this section prior to using this machine. Installation Precautions Avoid Installing the Machine in the Following Locations Avoid locations subject to extremes of temperature and humidity, whether low or high. Avoid locations where ammonia gas is emitted. Avoid locations near volatile or flammable materials, such as alcohol or paint thinner. Avoid locations that are subject to vibration. For example, avoid installing the machine on unstable floors or stands. The machine might interfere with sound and picture signal reception. Insert the power plug into a dedicated power outlet, and maintain as much space as possible between the machine and other electronic equipment. Installation Location and Handling. Using the machine in this state may cause a fire or electrical shock. Also, avoid. A variety of file formats are supported PDF, TIFF, and JPEG, which offer you greater flexibility in accommodating the digital workplace environments. <http://www.pemas.at/admin/fckeditorupload/dodge-ram-hemi-manual-transmission-conversion.xml>



If the Start key you lose the edit pen, contact your local authorized Canon Press to start an operation. dealer. Do not use an object with a sharp end, such as a pencil or ballpoint pen, in place of the edit pen. Press to check the progress of a copy job, change the order of printing, or cancel printing. How to Turn ON the Main Power Make sure that the power plug is firmly inserted into the power outlet. After the Start Up screen disappears, the MEAP Start Up screen is displayed. After the Start Up screen disappears, the MEAP Start Up screen is displayed regardless of the Initial Function settings. IMPORTANT If you attempt to use the machine without registering the necessary information correctly, the machine may not function properly. The selected mode is set. The current date and time settings are used as standard timer settings for functions that require them. GMT The time at the Greenwich Observatory in England is called GMT Greenwich Mean Time. If you are setting the Time Zone Press the Time Zone dropdown list select the time zone where the machine is located. NOTE The default setting is GMT 0000. This number is printed on the document that you fax to the receiving party. The number may also be displayed on the touch panel display of the receiving party's machine, depending on their type of machine. NOTE You can set to display and print the sender's name instead of the name stored as the unit's name with the Senders Names setting from the Send Settings screen. You can enter up to 24 characters for the sender's name. When you send a document, the recipient's machine displays or prints your name or company's name and department's name, if applicable as the sender's information on the recording paper. The selected mode is set. Usage Help Pressing after selecting a mode brings up a guide screen with an explanation of that mode. Use this help function if you do not understand how to use the mode you are setting. Loading Paper. 22 Replacing the Toner Cartridge.

IMPORTANT A screen prompting you to load paper also appears if the selected paper drawer is not fully inserted into the machine. Before loading paper, always fan the sheets several times, and align the edges to facilitate feeding. Also, you should always fan paper that has just been removed from a newly opened paper package. Even out the edges of the paper stack. Load the paper stack against the right wall of the paper drawer. When loading paper into the paper drawer for the first time, set the paper size slide to match the paper size being loaded. You can continue printing, but at this time you should purchase new toner of the indicated colour so that you have it available when needed. Do not replace toner cartridges until the message prompting you to do so appears. If you continue

copying or printing in blackandwhite after cyan, magenta, or yellow toner runs out, do not remove the depleted toner cartridges from the machine. Pull the toner cartridge out halfway, then remove it completely while supporting it with your other hand from underneath. WARNING Toner Supply Port Do not burn or throw used toner cartridges into open flames, as this may cause the toner. Support the new toner cartridge with your hand from underneath while pushing it into the machine with your other hand. IMPORTANT When replacing toner cartridges, make sure that the colour of the toner cartridge matches the colour of the toner supply port. Clearing Paper Jams..32 List of Error Messages. This screen repeatedly appears on the touch panel display until the paper jam is entirely cleared. WARNING There are some areas inside the machine which are subject to highvoltages. See the appropriate pages below for instructions on finding and removing jammed paper. Or, you can follow the instructions on the touch panel display. If jammed paper tears while it is being removed, be sure to remove any remaining pieces from inside the machine.



<http://www.bosport.be/newsletter/4-color-manual-screen-printing-machine>

Continue to follow the procedure and instructions displayed on the touch panel display. Once you have removed all of the jammed paper in locations other than the feeder, printing or copying resumes. Remedy Check the systems available memory, and delete any unnecessary documents stored in the inboxes. Cause 2 The scanned document cannot be stored because there are more than 100 documents in the specified inbox. Multifunctional Operations.42 Available Paper Stock. The following table provides you with the details of multifunctional operations. Available Unavailable Available, but with conditions Receive Send Scan. After you finish reading this guide, store it in a safe place for future reference. Please refer to them for detailed information. However, as we are constantly improving our products, if you need an exact specification, please contact Canon. Please read this manual thoroughly before operating the product in order to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference. The keys or buttons which you should click or press are marked with a, as shown below. Adobe, Acrobat, PostScript, and PostScript 3 are trademarks of Adobe Systems

Incorporated. Apple, AppleTalk, EtherTalk, LocalTalk, Macintosh, Mac OS, and Power Macintosh are trademarks of Apple Computer, Inc. Optional Equipment and System Environment Requirements.. 12 Printing or Sending a Fax from a Computer. If you are using the optional Color Network Printer Unit, see the manual provided with the optional Color Network Printer Unit. Before specifying the settings of the desired protocol Chapters 3 to 6, be sure to set items explained in this chapter. Connecting the Machine to a Computer or Network. For more information, consult your local authorized Canon dealer. The machine is USB Full Speed USB 1.1 equivalent compatible.

<https://climatechange-news.com/images/brother-mfc-7860dw-manual-feed.pdf>



IMPORTANT Settings specified from the control panel become effective after the machine is restarted, after the procedure. The display returns to the Network Settings screen. Select the appropriate ring speed and the communication method for your environment from the Ring Speed and Communication Method dropdown list. 214 Interface Settings. IMPORTANT The machine may not work normally with the default settings. Enter a value appropriate for your environment. If you do not set any LAA, the MAC address is used as the node address. Settings from the Control Panel The procedure for specifying the settings from the control panel is as follows Specify the SNMP settings. NOTE When you spool a print job on the hard disk, the time required to release a computer outputting a print job is shortened. After configuring protocol settings, you can change the content by using a web browser Remote UI or a web browser NetSpot Console. Otherwise, skip to step 13. Specify the IP address of a DNS server. numeric keys to enter the IP address. If you do not want to set up a DNS secondary server, enter. Enter the host name and domain name. Output of a banner page is set on a printjob basis. Check to see if the network settings you specified are set correctly. NOTE If the message appears on the touch panel display, enter the System Manager ID and password. The machine supports both SMTP and POP3 functions. Set the time period required to delay the startup of network communications for the machine. The display returns to the Network Settings screen. The startup time settings are complete. Canon LPR2 enables you to easily set ports. For more information, see the Canon LPR2 Users Guide PDF manual. For instructions on how to

install Canon LPR2 and set ports, see the Canon LPR2 Users Guide PDF manual. For instructions on how to display the Canon LPR2 Users Guide, see the Network Quick Start Guide. If you do not want to use Canon LPR2, see steps 2 to 11.

<http://clinicafootcenter.com/images/brother-mfc-795cw-service-manual.pdf>



For instructions on how to display the Canon LPR2 Users Guide, see the Network Quick Start Guide. In this case, you cannot set Raw.Log in to a workstation as a superuser. The following three print queues are available LP The machine prints according to its spool settings. After installing Canon LPR2, restart the computer. For instructions on how to install Canon LPR2 and set ports, see the Canon LPR2 Users Guide PDF manual. For instructions on how to display the Canon LPR2 Users Guide, see the Network Quick Start Guide. For more information, see the Canon LPR2 Users Guide PDF manual. For instructions on how to display the Canon LPR2 Users Guide, see the Network Quick Start Guide. This function is for use in special environments, such as in a largescale system that includes a printing function for processing a large amount of business data. Enter a user name and a password not longer than 24 alphanumeric characters. For details, see the Windows manual. Set a recipient address using the control panel. NOTE Depending on your environment, the access rights settings for a drive or directory may differ. For details, see the Windows NT Server 4.0 manual. FTP Server for iW Gateway NOTE An FTP server for iW Gateway is required for receiving data from the machine, when used with iW Gateway. Set up the FTP server for iW Gateway. For details about the settings, see the iW Gateway Users Guide. NetWare Network Setup Procedures. 42 NetWare Print Service Settings. With NetWare 3.2, it is recommended that you use Bindery print service. NOTE If you are using the queue server mode, this step is not required. NetWare print service settings are complete. NOTE If the message appears on the touch panel display, enter the System Manager ID and password. Select the print service from the Print Service dropdown list. The protocol settings are complete. This section describes how to set up a computer as a file server. There are two methods for specifying the recipient address settings.

Or you can press each key to enter the desired value for each item. NetBIOS Network Setup Procedures. 52 Protocol Settings. After configuring the settings, you can change the content by using a web browser Remote UI or a web browser NetSpot Console. SMB and WINS Settings To use the machine on a NetBIOS network, specify the SMB settings. IMPORTANT To print or send a fax from a computer, the optional equipment must be installed. Specify the IP address of a WINS server. IMPORTANT If DHCP determines the IP address, the IP address obtained from a DHCP server is overwritten with the IP address of a WINS server obtained from the DHCP server, whenever possible. Follow the instructions below. Confirm the computer name. Up to 20 alphanumeric characters can be entered for the user name, and up to 14 for the password. NOTE In the Active Directory environment, the procedures for setting up users differ from the above. For details, see the Windows manual. Select or add the users or groups you want to give access to the shared folder to. NOTE To browse the directories and send data in the Windows Server 2003 Active Directory environment, you must first specify this setting. There are two methods for specifying the recipient address settings. Or you can press each button to enter the desired value for each item. Log in to a workstation as a superuser. Set up the users who access Samba shared folder, and their passwords. AppleTalk Network Setup Procedures. 62 Macintosh Network Settings. You cannot use AppleTalk on Token Ring. If the Token Ring board is installed on the machine, you cannot use AppleTalk. Remove the Token Ring board if it is installed on the machine. Protocol Settings. The name you enter here appears in the Macintosh Chooser. See the Network Quick Start Guide to install the printer driver and to set the port. IMPORTANT To print from a computer, the optional equipment must be installed. NetSpot Device Installer. 72 NetSpot Console.

<http://xn--80akij1ajew.xn--p1ai/wp-content/plugins/formcraft/file-upload/server/content/files/162708d3fcc94---boston-acoustics-ba745-computer-speakers-manual.pdf>

Available on the CDROM, NetSpot Device Installer can be accessed directly without installation, enabling network users to quickly and easily specify the initial settings of network devices. This software enables network administrators to set or view various types of information about network devices using a web browser, such as list or map display of devices, detailed protocol settings, display and notification of device status, and job manipulations. Cause The machine and cable are not properly connected. Remedy Turn OFF the machines power switches, check that the machine is connected to the network using the proper cable, and then turn them to ON again. Detailed information concerning the machine cannot be set or browsed using a web browser Remote UI, or utility. Remedy Confirm that the IP addresses are properly set up. If the IP addresses were set using DHCP, BOOTP, or RARP, confirm that they are operating. NOTE Your computer may not be able to recognize the machine even though the IP address settings are appropriate. Network Setting Items... 92 Available Software for Network Settings. To print a users data list, follow the procedure below. The procedure for referring to the access log is as follows. All rights reserved. Follow the instructions below to use the User Manual CDROM Menu. Be sure to test the breaker once or twice a month using the following procedure. If login authentication by the SDL or SSO login service is not set, and MEAP is selected as the initial function in Common Settings from the Additional Functions screen. If login authentication by the SDL or SSO login service is set. Press the Time Zone dropdown list. Even out the edges of the paper stack. Load the paper stack against the right wall of the paper drawer. See the appropriate pages below for instructions on finding and removing jammed paper. If a paper jam occurs inside an optional unit. See the instructions on the following pages.

www.cndasion.com/d/files/car-with-automatic-and-manual-transmission-both.pdf

Remedy Check the systems available memory, and delete any unnecessary documents stored in the inboxes. Please check your inbox, and if you can't find it, check your spam folder to make sure it didn't end up there. Please also check your spam folder. Please refer to them for detailed

information. Depending on the system configuration and product purchased, some manuals may not be needed. Please read this manual thoroughly before operating the machine in order to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference. For the further details of the operations, please refer to the attached CDROM manual. In order to use the machine safely, always pay attention to the machine safely. Be sure to read these items. If you are copying documents that resemble paper money closely, you may be unable to get an appropriate image. This means that the product does not produce hazardous laser radiation. Do not remove protective housings or external covers, except as directed by the equipment's Reference Guide. Also, accessories such as watches and rings should be removed before working on the product. The reflected beam, even though visible or invisible, can permanently damage your eyes. All rights reserved. A nonexhaustive list of these documents is set forth below. This list is intended to be a guide only. As these instructions are intended to prevent injury to the user or other persons or destruction of property, always pay attention to these instructions. Also, since it may result in unexpected accidents or injuries, do not perform any operation unless otherwise specified in the manual. If these items come into contact with a high-voltage area inside the machine, it may result in a fire or electrical shock. Then, contact your local authorized Canon dealer. Blocking these openings can cause the machine to overheat.

Never place the machine on a soft surface, such as a sofa or rug. Using an extension cord may result in a fire or electrical shock. If an extension cord must be used, however, use one rated for voltages of 220-240 V AC and over, untie the cord binding, and insert the power plug completely into the extension cord outlet to ensure a firm connection between the power cord and the extension cord. If the power cord is damaged, this could cause current to leak, resulting in a fire or electrical shock. If objects are placed around the power plug, you will be unable to unplug it in an emergency. Then, contact your local authorized Canon dealer. Continued use of the machine in this condition may result in a fire or electrical shock. If gas from these sprays comes into contact with the electrical components inside the machine, it may result in a fire or electrical shock. Otherwise, the power cord or interface cable may be damaged, resulting in a fire or electrical shock. Also, do not spill water, liquids, or flammable substances alcohol, benzene, paint thinner, etc. inside the machine. If these items come into contact with a high-voltage area inside the machine, it may result in a fire or electrical shock. If these items are dropped or spilled inside the machine, immediately turn OFF the main power switch, and disconnect the power cord from the power outlet. Then, contact your local authorized Canon dealer. Doing so may damage the platen glass and Also, turn OFF the main power switch, and disconnect the power cord for Read the following remarks and instructions for safety. If the power cord is connected for a long period of time in a damp, dusty, or smoky location, dust can build up around the power plug and become damp. This may cause a short circuit and result in a fire. Do not use alcohol, benzene, paint thinner, or other flammable substances. Check detergent for flammability prior to use.

If flammable substances come into contact with a high-voltage area inside the machine, it may result in a fire or electrical shock. When removing jammed paper or when inspecting the inside of the machine, do not allow necklaces, bracelets, or other metal objects to touch the inside of the machine, as this may result in burns or electrical shock. If they become dirty, wash them immediately with cold water. Washing them with warm water will set the toner, and make it impossible to remove the toner stains. If the toner gets into your eyes or mouth, wash them immediately with cold water and immediately consult a physician. If the toner gets into your eyes or mouth, wash them immediately with cold water and immediately consult a physician. If these items are ingested, consult a physician immediately. If you use a cardiac pacemaker and feel abnormalities, please move away from the product and consult your doctor. Follow the instructions below to use the User Manual CDROM Menu. When you insert the User Manual CDROM provided into the CDROM drive, the Language Selection screen is displayed. Clicking a language on this

screen displays the following menu. The sample screen shot shown here is for Windows users. After clicking on the desired guide, Acrobat Reader starts, and the PDF manual is displayed. Be sure to test the breaker once or twice a month using the following procedure. Confirm that the power is cut OFF. In our experience this drum will usually run more than one cycle before needing to replace the drum. Page Yield Approximately 40000 pages as per OEM Specifications. In our experience this drum will usually run more than one cycle before needing to replace the drum. Page Yield Approximately 40000 pages as per OEM Specifications. Product Type Compatible Drum Reset Chip The printer manufacturer has installed a builtin counter to make sure that you replace the drum at certain intervals to maintain image quality.

In nearly all cases it is not necessary to replace the drum. Takes less than few minutes to install the chip Very easy to install No Special Tools Required Detailed Illustrated Instructions Attached The Yellow Compatible Drum Reset Chip suits Canon CLC 3220 is just one of thousands of lines we supply. With such a huge range, you are sure to easily find all the cartridges you need for all other printers you may have. With our superior buying power, we can pass on the great savings to our valued customers ! In the unlikely event your product may be faulty, please call us on 1300 966 922 for fast assistance. See our warranty information page for full details. Note Direct deposit, Swift Transfer and Western Union payments require clearance of payment before shipment. With years of experience providing secure online shopping to our customers, you can be sure that any purchases you make with Tonerstop will be safe. When you go to the Checkout page, you will see that the page starts with https meaning secure SSL connection and there is a padlock in the address bar of your browser window indicating this. Your details are decrypted only by our banks server to process your order. Our systems are extremely secure, In fact this is much safer than ordering over the phone, since you do not need to share your credit card information. As an additional option, you can always call us on 1300 966 922 and place your order over the phone. As a general guide, deliveries to major cities will take 1 to 3 days whilst it could take up to 5 days for remote areas. Thank you for choosing Tonerstop for your printer consumables.

Brother, Canon, Dell, Develop INEO, Epson, Gestetner, HP, IBM, Intec, Konica Minolta, Kyocera, Lanier, Lexmark, Nashuatec, OKI, Olivetti, Ricoh, Samsung, Savin, Sharp, Tally Genicom, Tools, Toshiba, Xante, Xerox and other manufacturer logos and brand names are registered trademarks of their respective owners who have no association with the products or services provided by Tonerstop.com.au. Any use of a brand name or model name is made solely for demonstration purposes. Errors and omissions excepted. Takes less than few minutes to install the chip Very easy to install No Special Tools Required Detailed Illustrated Instructions Attached Brother, Canon, Dell, Develop INEO, Epson, Gestetner, HP, IBM, Intec, Konica Minolta, Kyocera, Lanier, Lexmark, Nashuatec, OKI, Olivetti, Ricoh, Samsung, Savin, Sharp, Tally Genicom, Tools, Toshiba, Xante, Xerox and other manufacturer logos and brand names are registered trademarks of their respective owners who have no association with the products or services provided by Aussietoner.com.au. Any use of a brand name or model name is made solely for demonstration purposes. Fa mere at vide om vores brug af cookies og rediger dine cookieindstillinger her. Du accepterer vores brug af cookies på din enhed ved at fortsætte med at bruge vores webside eller ved at klikke på Jeg accepterer. Det tager 1 minut og vil hjælpe os med at forbedre vores supportwebsted. By parts code you can check what other devices it is used. You can print your Parts List or export to Excel to further work with it. We only help you to create your parts list for request from your suppliers. Add your headers and comments. Use saved Parts Lists as templates to create new lists. Change the contents of the old list and save it as new. You can add, delete list items, change headers, comments and quantity of spare parts. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions.

To install your download click on the name of the downloaded file. Canon Authorized Dealers provide

the highest quality service and are supported by Canoncertified technicians using Canon Genuine parts. Please contact your Canon Authorized dealer for all your service needs. Need to find a dealer Bond 15 sheets LGL, 11 x 17 20 lb. BondThe driver may be included in your OS or you may not need a driver. Recommended Drivers File Name Date File Size Optional Drivers File Name Date File Size Recommended Software File Name Date File Size Optional Software File Name Date File Size Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size Visit the Canon Online Store. Vespa PX150 USA Service Repair Manual Circa 2005. Canon CLC 700 Service Manual Canon C. Page 3 Hardcore Circuit Training For Men Body Weight Workout , Chohwora Udu Circus Sideshow Freaks Vintage Photo Album PDF Ebook CIRCUIT DIAGRAMS AV 27F734, AV 32F734 Download Canon Clc1000 Service Ma. Page 4 Circle Of Friends Cookbook 25 Burger Recipes Ricoh CLC7000 Colour Printer Service Manual Canon CLC5000 Colour Laser Copier Service Manual Canon CLC1000 CLC1000s And CLC3100 Colour Laser Copier S. We should do this for several simple reasons First of all view first pages of the manual, you can find above. You should find there the most important technical data Canon 3220 thus you can check whether the hardware meets your expectations. When delving into next pages of the user manual, Canon 3220 you will learn all the available features of the product, as well as information on its operation. The information that you get Canon 3220 will certainly help you make a decision on the purchase. You will learn then if you properly used the available features, and whether you have not made any mistakes, which can shorten the lifetime Canon 3220.

<http://www.diamondsinthemaking.com/content/4-color-manual-screen-printing-machine>